



2026 11thFrame.com


**Crosswise Ratios
(by units)**

Zone 1				Zone 5			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 80.0	1.0		3L-7L	Left = 43.0	2.3	
3R-7R	Right = 80.0	1.0		3R-7R	Right = 43.0	2.3	
18L-18R	Center = 80.0			18L-18R	Center = 100.0		
Zone 2				Zone 6			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 60.0	1.0		3L-7L	Left = 3.0	1.0	
3R-7R	Right = 52.0	1.1		3R-7R	Right = 3.0	1.0	
18L-18R	Center = 60.0			18L-18R	Center = 3.0		
Zone 3				Zone 7			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 36.0	1.1		3L-7L	Left = 0.0	#DIV/0!	
3R-7R	Right = 28.0	1.4		3R-7R	Right = 0.0	#DIV/0!	
18L-18R	Center = 40.0			18L-18R	Center = 0.2		
Zone 4				Zone 8			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 80.0	1.0		3L-7L	Left = #DIV/0!	#DIV/0!	
3R-7R	Right = 80.0	1.0		3R-7R	Right = #DIV/0!	#DIV/0!	
18L-18R	Center = 80.0			18L-18R	Center = #DIV/0!		

**Crosswise Ratios
(by ml)**

Zone 1				Zone 5			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 0.268	1.0		3L-7L	Left = 0.162	2.3	
3R-7R	Right = 0.268	1.0		3R-7R	Right = 0.162	2.3	
18L-18R	Center = 0.268			18L-18R	Center = 0.377		
Zone 2				Zone 6			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 0.251	1.0		3L-7L	Left = 0.008	1.0	
3R-7R	Right = 0.218	1.1		3R-7R	Right = 0.008	1.0	
18L-18R	Center = 0.251			18L-18R	Center = 0.008		
Zone 3				Zone 7			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 0.106	1.1		3L-7L	Left = 0.000	#DIV/0!	
3R-7R	Right = 0.082	1.4		3R-7R	Right = 0.000	#DIV/0!	
18L-18R	Center = 0.117			18L-18R	Center = 0.000		
Zone 4				Zone 8			
	Average	Ratio			Average	Ratio	
3L-7L	Left = 0.101	1.0		3L-7L	Left = 0.000	#DIV/0!	
3R-7R	Right = 0.101	1.0		3R-7R	Right = 0.000	#DIV/0!	
18L-18R	Center = 0.101			18L-18R	Center = 0.000		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

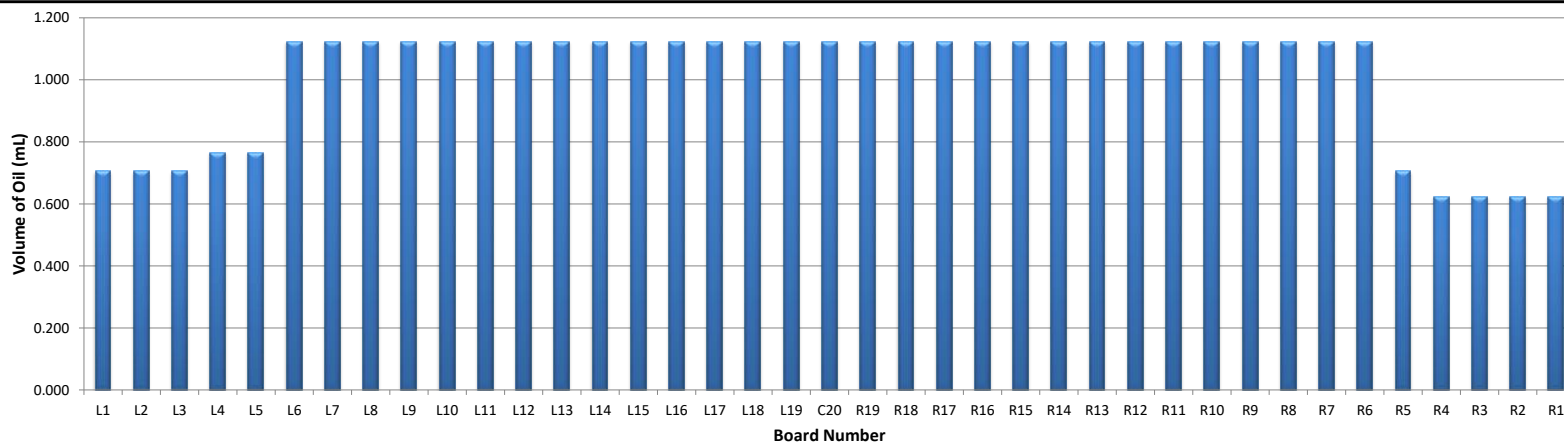

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
1.25	1	1.34